


USER GUIDE

YV and YB Professional


PRODUCT OVERVIEW

- Storage bag
- Product
- USB-C charging cable


INSIDE YV BOX

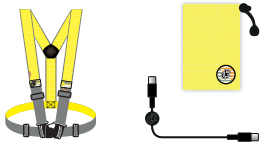

INSIDE YVP BOX

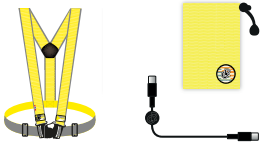

INSIDE YB BOX

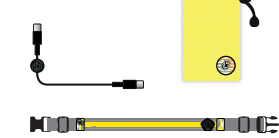

BEFORE USE



CHARGE THE CONTROL UNIT

Charge the product with USB-C cable (included)

- Open the USB-C cover on the control unit
- Plug the cable into the unit
- Plug the other end of the cable into the charging device
- During charging, the indication lamps will show how much power is charged
- When the battery is fully charged, 4 indication lamps will be lighted
- Remove the cable from the control unit and **close the battery cover to keep the control unit waterproof.**

- | | |
|---|--------------|
| 1 | LED light |
| 2 | Power supply |
| 3 | Reflex |
| 4 | Adjustable |


ADJUST SIZE

The size will increase or decrease round waist depending on how you regulate the elastic band.

- Adjust the elastic band so that it has the same length on both sides of the large buckle in front

How to regulate:

- Hold the adjustable buckle in one hand
- With the other hand, feed or pull the elastic band through the buckle to form a loop
- Pull the looped elastic band through to the opposite side

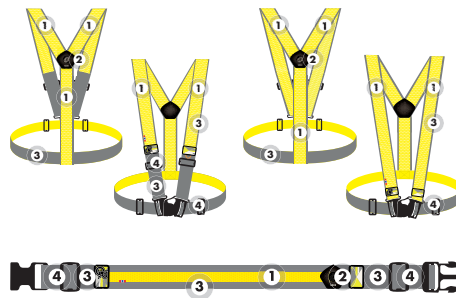

TECHNICAL SPECIFICATION

Charging time	< 2 hours
Light source	LED
Light	Homogeneous and energy efficient
Lighting hours	>14 hours
Power supply	Based on rechargeable lithium technology
Charging	USB-C
Temperature range	Operation: -25°C - +45°C Charging: +10°C - +45°C



PROTECT YOUR ENVIRONMENT

- Recycled the products and do not dispose together with normal waste
- Throwaway the product in accordance with the current local determines




MAINTENANCE


- Clean the product regularly with a damp cloth and mild soap
- Hang up the product to dry, before being placed in the storage bag

WASH



HANDLE LED WITH CARE

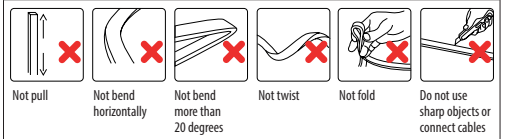

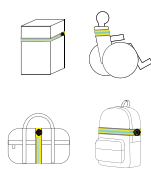USE		
How to wear	YV Professional Vest is available in 2 sizes: YV2P: XS - 2XL YV3P: M - 5XL YVP Professional Vest YVP UNISEX: M - 5XL  	YB Professional Belt can be worn around stroller, wheelchair, bag, other objects and crossbody. Several belts can be joined together  
Control unit	The light is turned on and off by pressing the GR button on top of the control unit. When the battery is low, the light on the vest starts flashing The 4 indication lights show how much power you have left: • 4 lights = 100 % fully charged • 3 lights = 75% power • 2 lights = 50% power • 1 light = 25% power • 0 light = 0% power 	

WARRANTY: Provided by the company Groseth Light (described below as the "Seller") to you who is the original purchaser of the Seller's own developed products and is identified on the Seller's invoice.

Seller warrants that, when delivered in new condition, all materiality will be free from defects in materials and workmanship under normal use for a period of two (2) years. Batteries come with a one (1) year warranty. The warranty period is valid from the original purchase date. Assessment of whether the Product is defective shall be made by the Seller taking into account the general condition of the Product. A product is not considered defective solely as a result of the failure of individual LED components. If the number of defective LED components is less than 10% of the total number of LED components in the Product or for LED strip where the continuous output is less than 5cm, this is not considered defective.

Warranty does not apply to loss or damage to the Product caused by: negligence, misuse, abuse, improper installation; defects in storage or maintenance and damage resulting from fire or natural disasters, vandalism or civil disturbances; overvoltage, poor current or power supply, fluctuations in the electric current, corrosive environment; evoked vibrations, harmonic oscillation or resonance associated with the movement of air flows around the Product; alteration; accident; failure to comply with the installation, operation, maintenance or environmental conditions established by Seller or applicable electrical regulations or improper maintenance of the Product or if the Product is not used for the purpose for which it is designed.

If Seller determines that the Product is defective, Seller will determine whether the Product will be repaired or replaced. Seller reserves the right to use new, reconditioned, refurbished, repaired or remanufactured products or parts in the warranty repair or replacement process. Such products and parts will have the same function and performance as an original product or part. This is determined by the Seller and is guaranteed for the remainder of the original warranty period.

To make a warranty claim, you must notify Seller in writing within five (5) business days, after discovering or should have discovered the defect, provide proof of purchase such as an invoice, and comply with Seller's other warranty claims. The Buyer fills out the Seller's complaint form available on the www.grosethlight.com and sends this to the post@grosethlight.com. If the Vendor provides feedback that this is a complaint case, the Customer must return the defective item to the Supplier in the original packaging within 14 days and cover costs for transport and delivery.

Under no circumstances shall Seller be liable for any consequences, consequential, personal injury, direct or indirect, special or other damages that have arisen as a result of the use of this product.


The seller's liability will under no circumstances exceed the amount you pay for the product. This warranty is only valid and can only be processed in Norway. For more info see our Sales and Delivery Terms available on www.grosethlight.com.

This warranty is valid only for the purchase of the Product at or after the time set out below. Seller reserves the right to change this warranty from time to time. Any modification of this warranty shall apply to all orders placed with Seller on or after the date of such revised warranties.


PRODUKT OVERSIKT

- Oppbevaringspose
- Produkt
- USB-C lade kabel


I YV BOKSEN

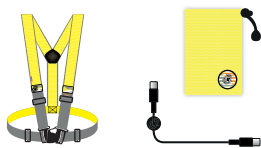

I YVP BOKSEN

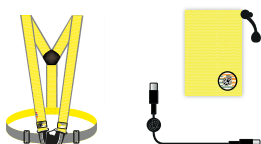

I YB BOKSEN

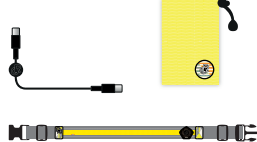

FØR BRUK



LAD KONTROLLENHETEN

Produktet lades opp med USB-C kabel (inkludert)

- Åpne USB-C-dekselet på kontrollenheten
- Koble USB-C-kabelen til kontrollenheten
- Sett den andre enden av kabelen i ladeenheter
- Når man lader vil indikator lampene vise status på lading
- Når batteriet er fulladet, vil alle de 4 indikator lampene lyse
- Fjern USB-C-kabelen og lukk batteridekselet for å holde kontrollenheten vannrett

REGULERING

Størrelsen på midjen vil øke eller bli redusert avhengig av hvor mye du regulerer strikken

- Pass på å regulere strikken slik at den er like lang på begge sider av den store spennen foran

Hvordan regulere:

- Hold den justerbare spennen i én hånd
- Med den andre hånden, mat eller trekk strikken gjennom spennen for å danne en løkke
- Trekk den buete strikken gjennom spennen til motsatt side

1	LED lys
2	kontrollenhet
3	Refleks
4	Regulering



TEKNISKE SPESIFIKASJONER

Ladetid	< 2 timer
Lyskilde	LED
Lyset	Homogent og energieffektivt
Brenntid	>14 timer
Strømforsyning	Basert på oppladbar lithium teknologi
Lading	USB-C
Temperaturområde	Drift: -25°C - +45°C Lading: +10°C - +45°C



BESKYTT MILJØET

- Produktene må resirkuleres og skal ikke kastes sammen med vanlig avfall
- Kast gjenstanden i.h.t. gjeldende lokale bestemmer




VEDLIKEHOLD

- Rengjør produktet regelmessig med en fuktig klut og mild såpe
- Produktet henges opp til tork, før det legges i oppbevaringsposen

VASK



BEHANDLE LED MED FORSIKTIGHET

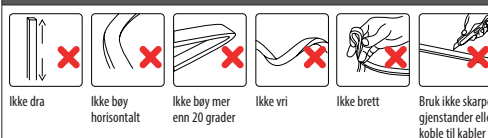

BRUK

Hvordan bruke produktet	YV Vest Profesjonell er tilgjengelig i 2 størrelser: YV2P: XS - 2XL YV3P: M - 5XL YVP Profesjonell Vest YVP UNISEX: M - 5XL	YB Belte Profesjonell Kan festes rundt barnevogn, rullestol, veske, andre objekter eller rundt kroppen. Flere belter kan kobles sammen.
kontrollenhet	Lyset slås på og av ved å trykke på GR-knappen på toppen av kontrollenheten. Ved lavt batteri starter lyset på vesten å blinke 4 indikator lamper viser hvor mye strøm du har igjen: • 4 lys = 100 % fulladet • 3 lys = 75% strøm • 2 lys = 50% strøm • 1 lys = 25% strøm • 0 lys = 0% strøm	

GARANTI: Er gitt av selskapet Groseth Light (beskrevet nedenfor som "Selger") til deg som er den opprinnelige kjøperen av Selger sine egne utviklede produkter og som er identifisert på Selgers faktura.

Selger garanterer at, når den leveres i ny tilstand, all vesentlighet vil være fri for mangler i materiell og utførelse ved normal bruk i en periode to (2) år. Batterier har ett (1) års garanti. Garantitiden gjelder fra den opprinnelige kjøpers innkjøpsdatoen. Vurdering om Produktet er defekt, skal gjøres av Selger og ta i betraktning den generelle tilstanden til Produktet. Et produkt anses ikke defekt utelukkende som følge av svikt i individuelle LED-komponenter. Hvis antallet defekte LED komponenter er mindre enn 10% av det totale antall LED-komponenter i Produktet eller for LED stripe der kontinuerlig utfall er mindre eller enn 5cm, anses dette ikke som defekt.

Garantien gjelder ikke for tap eller skade på Produktet forårsaket av: uaktsomhet, feilbruk, mishandling, feil installasjon; mangler ved oppbevaring eller vedlikehold og skader som følge av brann eller naturkatastrofer, hærverk eller sivile uroligheter; overspenning, dårlig strøm eller strømforsyning, svingninger i den elektrisk strømmen, korrosive omgivelser; fremkalt vibrasjoner, harmoniske svingning eller resonans forbundet med bevegelse av luftstrømmer rundt Produktet; endring; ulykke; unnlatelse av å følge installasjon, drift, vedlikehold eller miljømessige betingelser fastsatt av Selger eller gjeldende elektriske forskrifter eller feil vedlikehold av Produktet eller hvis produktet ikke benyttes til formålet som den er konstruert for.

Hvis Selger avgjør at Produktet er defekt, vil Selger beslutte om produktet blir reparert eller erstattet. Selger forbeholder seg retten til å benytte nye, overholte, renoverte, reparerte eller reproduerte produkter eller deler i garanti reparasjonen eller utskiftingsprosessen. Slike produkter og deler vil ha samme funksjon og ytelse som et originalt produkt eller en del. Dette bestemmes av Selger, og garanteres for resten av den opprinnelige garantiperioden.

For å gjøre et garantikrav, må du varsle Selger skriftlig innen fem (5) virkedager, etter at han oppdaget eller burde ha oppdaget mangelen, gi kjøpsbevis slik som en faktura og overholde Selgers andre garantikrav. Kjøper fyller ut Selger's reklamasjonsskjema som er tilgjengelig på www.grosethlight.com og sender denne til post@grosethlight.com. Hvis Selger gir tilbakemelding at dette er en reklamasjonssak må Kunden returnere varen med mangler til Leverandøren i original forpakning innen 14 dager og dekke kostander til transport og gjennomføring av levering.

Ikke under noen omstendigheter skal Selger være ansvarlig for konsekvenser, følgeskader, personskade, direkte eller indirekte, spesielle eller andre skader som har oppstått som følge av bruken av dette produktet.

Selgers erstatningsansvar vil under ingen omstendigheter overstige beløpet du betale for produktet. Denne garantien er kun gyldig og kan kun behandles i Norge. For mer info se våre Salgs og leveringsbetingelser som er tilgjengelig på www.grosethlight.com.

Denne garantien er kun gyldig for kjøp av Produktet på eller etter tidspunktet angitt nedenfor. Selger forbeholder seg retten til å endre denne garantien fra tid til annen. Enhver endring av denne garantien skal gjelde for alle ordrer plassert hos Selger på eller etter dato for slike reviderte garantier.